
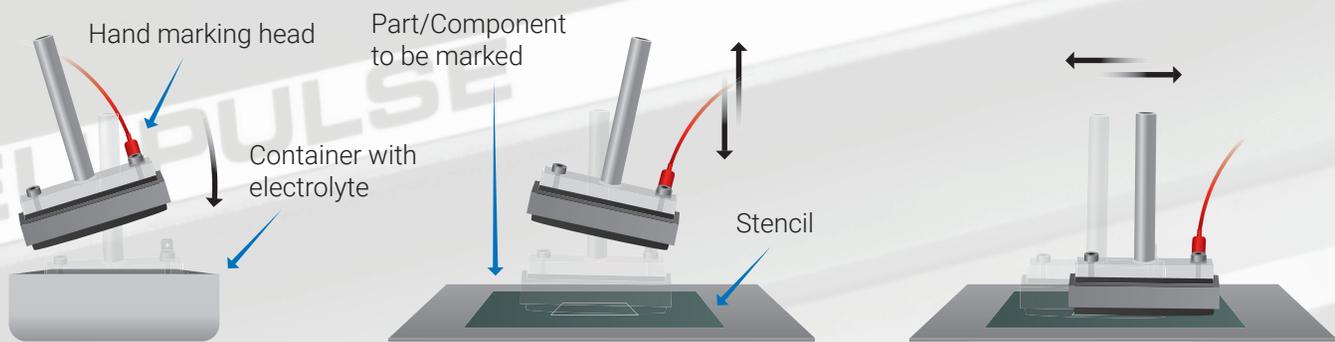


# ELECTROLYTIC MARKING SYSTEM

Marking with the hand marking head - explained in simple steps.

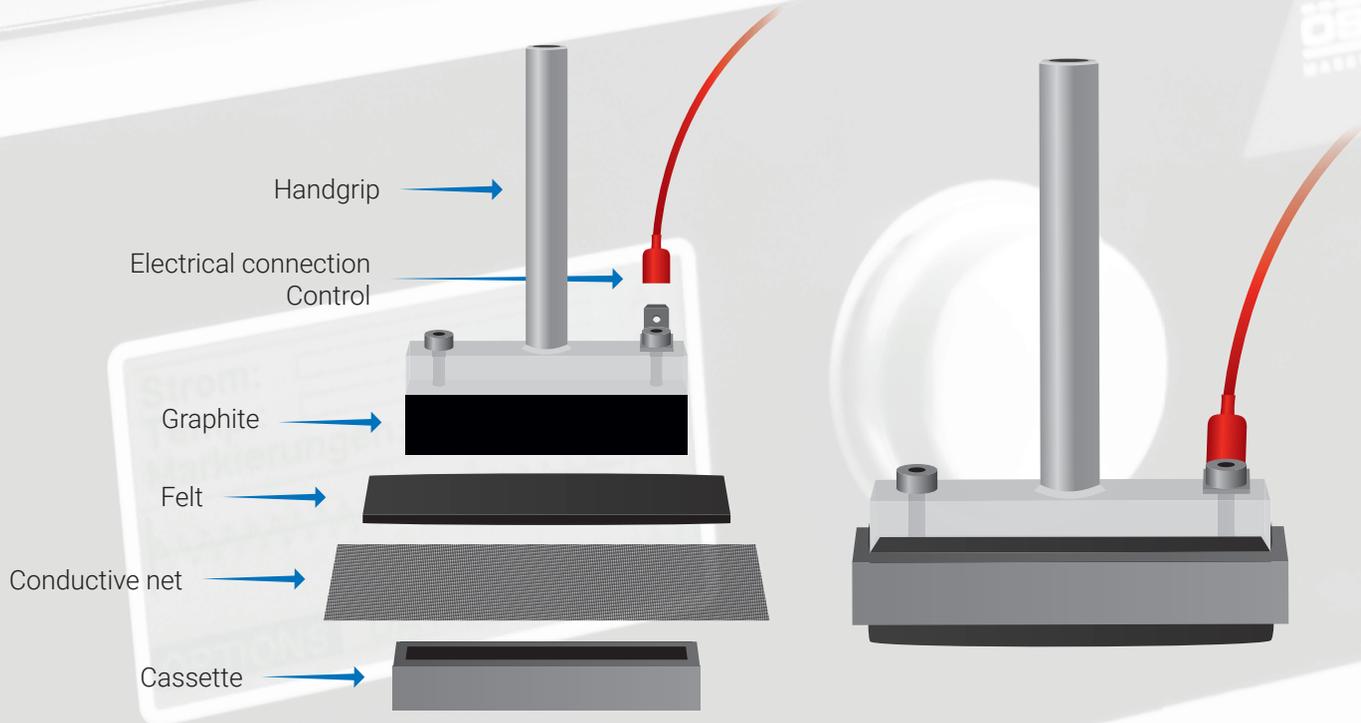

### Step 1


Immerse the marking head briefly in the electrolyte tank so that both the network and the felt are moistened.

### Step 2

Lightly press the wetted marking head onto the template and then lift it up again. This „dab“ movement distributes the electrolyte and already marks the metal/material.

### Step 3

Alternatively, you can also simply wipe over the stencil with the marking head. For best marking results, we recommend dabbing first and then wiping!

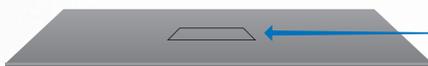

### Result

An exact black image of the motif on the component / metal. Depending on the material, white and deep markings are also possible.